




GUTTER RANGE

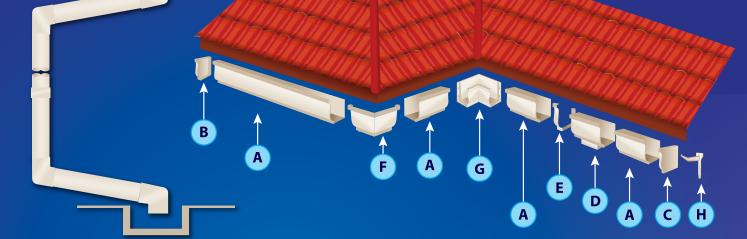

- A <mark>වැති පීල්ල</mark> Gutter
- B කෙළවර ආවරණය වම්පස Gutter End Cap (L)
- <mark>කෙළවර ආවරණය දකුණුපස</mark> Gutter End Cap (R)
- D <mark>රනින් හෙඩි</mark> Gutter Running Head
- E <mark>ගටර් ජොයිනර්</mark> Gutter Joiner
- F මයිටර් ජොයිනර් (පිටත පැත්ත) Miter Joiner - Out
- G මයිටර් ජොයිනර් (ඇතුළු පැත්ත) Miter Joiner - In
- H <mark>3 ලොක් බුැකට්</mark> 3 Lock Bracket

AVAILABLE COLORS



Amber Brown



White



ඉහළ ධාරිතාවය සහ විශේෂ හැඩය නිසා පහසුවෙන් ජලය බැස යාම



විවිධ වහල පුමාණයන්ට සහ හැඩයන්ට සරිලන පරිදි පහසුවෙන් සකසා ගත හැක



සුවිශේෂි ආකර්ශනීය පෙනුම



දිගුකල් පැවැත්ම - ලෝහ මෙන් මල නොබැඳීම



අමුදවෘ සහ සවිකිරීමේ පිරිවැය අවම වීම



පරිසර හිතකාම් බව / පුතිචකිුකරණය කලහැකි වීම



UV කිරණ වලින් ආරකෂාව



Inquiries **0112** 680 600

E-mail: support-innovation@anton.lk
(+94 774377644 / +94 777385051



සවිකිරීම් තාක්ෂණය

ඇන්ටන් යූපීවිසි වැහිපීළී ඉතා පහසුවෙන් සවිකල හැකි අතර පහත උපදෙස් පිළිපැදිමෙන් වසර ගණනක සුපිරි සේවයක් ලබාගත හැක

සුදුසු වඩිම්බු ලෑල්ලක් තෝරා ගන්න මේ සඳහා වැඩි ඝනකමකින් යුතු හොඳ තත්වයේ ලෑල්ලක් තෝරාගත යුතුය.

01

ලණුවක් ඇද සෙව්ලි සීරුමාරු කර හෝ වඩිම්බු ලෑල්ලේ සිට අඟල් 2කට නොවැඩි වනසේ පිටතට නෙරා පිහිටන පරිදි සෙව්ලි තහඩු කෙලින් කපා ගන්න.



02

වහලේ ආනතිය අනුව උපරිම උසක පිහිටන පරිදි බුැක්ට් සව් කරන්න.



වැහිපීලි සඳහා අඟල් 8ක දුරකින් පිහිටන පරිදි බුැකට් සවි කරන්න.



වැනි පීලි සඳහා බැකට් සවි කිරීමෙන් පසු බැකට් වල ඉහළ කොකු පීල්ලේ ඉහත දාරය සමඟ සම්බන්ධ කරන්න. එලෙස සියලු බැකට් සම්බන්ධ කිරීමෙන් පසු පීල්ල කරකවා බැකට්ටුවේ පහළ කෙළවරට තදකර රිංගවන්න.

වැහිපීලි 2ක් සම්බන්ධ කිරීම සඳහා වැහිපීලි පිරිද්දුමක් (ගටර් ජොයිනර්) භාවිතා කරන්න.



05

ජලය ඩවුන් පයිප්ප වෙත ගෙන යාම සඳහා රනින් හෙඩ් චකක් හෝ ඩවුන් ස්පවුට් හෙඩ් චකක් භාවිතා කරන්න.

06

ඩවුන් පයිප්ප පද්ධතියේ දී ඩවුන් පයිප්ප එල්බෝව, ඩවුන් පයිප්ප පොයිනරය, ඩවුන් පයිප්ප ක්ලිපයක් භාවිතා කරන්න. 07

පීලි මට්ටම - තිරස්				
වැහිපීලි වර්ගය	ජලය බැසයාම පීලි කෙලවරදී		ජලය බැසයාම පීලි මැදදී	
වැහපල වටගය	වහලයේ උපරීම වර්ගඵලය	ගලායන ධාරිතාවය	වහලයේ උපරිම වර්ගඵලය	ගලායන ධාරිතාවය
ඇන්ටර් ආමර් වැහිපීලි	197 වර්ග මීටර	245 ලීටර්/ව්නාඩි	414 වර්ග මීටර	518 ලීටර්/විනාඩි

පීලි මට්ටම - 1 : 600				
වැහිපීලි වර්ගය	ජලය බැසයාම පීලි කෙලවරදී		ජලය බැසයාම පීලි මැදදී	
වැහිපල වටගය	වහලයේ උපරිම වර්ගඵලය	ගලායන ධාරිතාවය	වහලයේ උපරිම වර්ගඵලය	ගලායන ධාරිතාවය
ඇන්ටර් ආමර් වැතිපීලි	පිලි 307 වර්ග මීට ර 384 ලීටර් <i>/</i>		584 වර්ග මීටර	730 ලීවර්/විනාඩි

St. Anthony's Industries Group (Pvt) Ltd.

No. 752/1, Dr. Danister De Silva Mawatha, Colombo 09, Sri Lanka.

+94 112 680 600 support@anton.lk www.anton.lk





RAIN WATER SYSTEM

SQUARE AND ANTON ARMOR GUTTERS - GENERAL FEATURES

The ANTON uPVC rain water system is proof of the more advanced Technology and superior know how of ANTON commands.

 
The shapes of ANTON Gutters prevent clogging and constriction, while the smooth and step free finish further provide a faster and easier flow of water. .

The type of collection of rain water from a roof depends on the type and size of the roof. The shapes of Gutters hold more water compare to other shapes. The higher edges of ANTON Gutters prevent overflow even in the heaviest monsoon rains.

Anton Gutters hide unseemly edge of the roof And it conforms, in every way to contemporary architectural concept.

ANTON Gutters are manufactured to withstand Ultra Violet Rays using a special stabiliser ingredient. This prevents war page and change of properties of the Gutters due to the ultra violet rays.

The edges and angles of the ANTON gutters specially reinforced where the stress is felt. And the angles are shaped as a further safeguard and it never loses it shape.



SQUARE GUTTERS



ANTON ARMOR GUTTERS

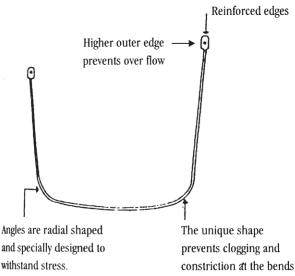


fig. 1 a

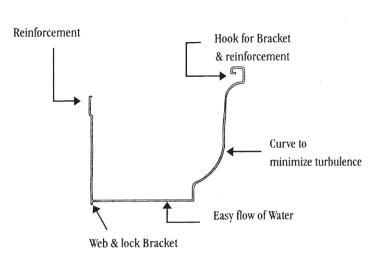


fig. 1 b



GUTTER FITTINGS

ANTON Provides all the related fittings to the rain water system. They are injection moulded and each part fits the other perfectly and naturally.

SQUARE GUTTER FITTINGS

fig. 2

Gutter End Cap (L)	Gutter End Cap (R)	
1 1	1 (/	
Gutter Running Head	Gutter Joiner	
Miter Joiner	Down Spout head	
Gutter bracket	Down Pipe Clip	
Down Pipe Elbow	Down Pipe Joiner	
Don't The Floor	Don't The Journ	



ANTON ARMOR GUTTER FITTINGS

fig. 3

fig. :	,	
Gutter End Cap (L)	Gutter End Cap (R)	
Gutter Running Head	Gutter Joiner	
Miter Joiner - Outside	Miter Joiner - Inside	
	Anton Armor Down Pipe Clip	
Three Lock Bracket		
Anton Armor Down Pipe Elbow	Anton Armor Down Pipe Joiner	
Adptor 90°	Down spout	



TYPICAL ANTON GUTTER INSTALLATION

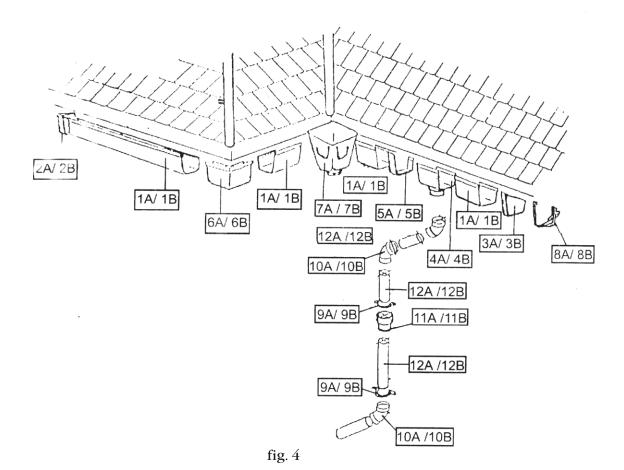


Table 1

	Square Type		Anton Armor Type
1A	Gutter Profile	1B	Gutter Profile
2A	Gutter End Cap (L)	2B	Gutter End Cap (L)
3A	Gutter End Cap (R)	3B	Gutter End Cap (R)
4A	Gutter Running Head	4B	Gutter Running Head
5A	Gutter Joiner	5B	Gutter Joiner
6A	Miter Joiner	6B	Miter Joiner - Out Side
7A	Down Spout Head	7B	Miter Joiner - Inside
8A	Gutter Bracket	8B	Three lock Bracket
9A	Down Pipe Clip	9B	Anton Armor Down Pipe Clip
10A	Down Pipe Elbow	10B	Anton Armor Down Pipe Elbow
11A	Down Pipe Joiner	11B	Anton Armor Down Pipe Joiner
12A	Down Pipe	12B	Anton Armor Down Pipe




INSTALLATION TECHNIQUES

ANTON uPVC Gutters are easy to install and following instructions are followed to obtain years of superior service.

	service.				
1	Select a suitable valance board. Care should be taken to select thick and good quality timber for this purpose.				
2	Draw a chord line and align or cut the roofing sheets straight, so that it will not protrude more than 2.1/2" from the valance board.	7 2"	fig. 5		
3	Fix two gutter brackets in level or in an angle at extreme ends of the valance board. Keep a clearance of 3/4" for square brackets (fig. 6 and zero for Anton Armor gutter bracket, from the roof bottom (Fig. 6 A)	3/4" J	fig. 6A		
4	Draw a chord between these two brackets and fix Gutter brackets of maximum 1 ½ feet intervals (fig. 7) for Square Gutters and maximum 1 feet intervals (fig. 7A) for Anton Armor Gutters. Areas where having high rain fall, the distance between two gutter brackets it is better to keep 8 inches.	fig. 7	fig. 7A		
5	After fixing all the brackets, insert gutter from upper side and allow it to rest with valance board side. Take a screw drive and gently lever front hook of the bracket to lock with Gutter (fig. 8) After fixing all the brackets, start fixing of gutter. From one end to other end fix the gutter to the upper hooks of the brackets. Use end caps at the end of the Gutters to close the open Gutter ends. (fig. 8A)	fig. 8	fig. 8A		
6	Use running heads or down spout head to carry the water to the Down pipes.				
7	Down pipe elbows, down pipe joiners, down pipe clips could be used in the down pipe system.				



DOWN PIPE SYSTEMS

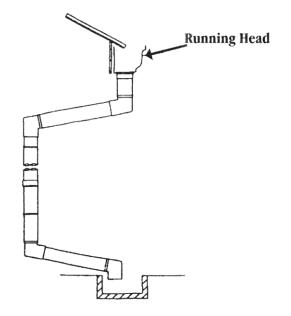

Running Head

Anton Armor - Down Pipe System

Square - Down Pipe System

Table 2 Gutter level - Horixontal

Type of Gutter	Gutter system outlet at end of Gutter Run Maximum roof area Flow Capacity		Gutter system outlet at centre of Gutter Run		
			Maximum roof area	Flow Capacity	
Square Gutter	87 m²	109 Ltr/min	174 m²	218 Ltr/min	
Anton Armor Gutter	197 m²	245 Ltr/min	414 m ²	518 Ltr/min	

Table 3 Gutter level - 1:600

Type of Gutter	Gutter system outlet at end of Gutter Run		Gutter system outlet at centre of Gutter Run		
	Maximum roof area	Flow Capacity	Maximum roof area	Flow Capacity	
Square Gutter	121 m ²	152 Ltr/min	242 m²	304 Ltr/min	
Anton Armor Gutter	307 m ²	384 Ltr/min	584 m²	730 Ltr/min	

Note: Testing based on a rainfall of 75mm per hour

Table 4 **Round - Down Pipe**

Normal Diameter	Outside Diameter (mm)	Wall Thickness (mm)	
3 1/2"	90	1.10 - 1.50	

Table 5 **Rectangular - Down Pipe**

Normal Diameter	Height (mm)	0 1	
90	70	1.10 - 1.30	12'